




TROY®


REAR FIXED BATTLESIGHT



WARNING! Observe safe firearm handling practices at all times. Make sure the firearm is unloaded and safety is engaged before starting installation. Installation should be performed by a professional gunsmith.

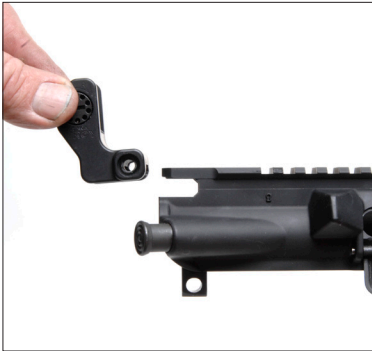

1. Remove screw from clamp and slide sight onto rail to rest in foremost rail cross-slot on handguard.

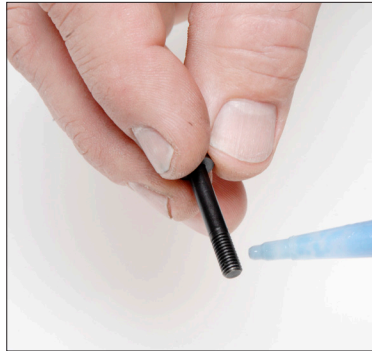

1. Remove screw from clamp and slide sight onto rail to rest in foremost rail cross-slot on handguard.



3. Insert screw and tighten while pushing sight forward against



Adjustments: Can be made with a 5.56mm bullet or a coin using the coin slot. To move bullet impact up, turn adjustment wheel to the right/clockwise. To move bullet impact down, turn adjustment wheel to the left/counter clockwise.

Zeroing Procedures

1. Fire a group of four (4) shots. Measure average distance from point of aim to point of impact.
2. Adjust rear sight for windage only.
3. Elevation adjustments are made with front sight post.
4. Confirm zero with a group of four aimed shots and adjust if necessary.
5. Sight apertures are on the same plane and either can be used without a change of impact.

TMIM_RearFixedSight_4-23-12

WWW.TROYIND.COM • West Springfield, Massachusetts 01089 U.S.A. • Tel: (866) 788-6412 • Fax: (413) 383-0339 • email: sales@troyind.com



TROY®


REAR FIXED BATTLESIGHT



WARNING! Observe safe firearm handling practices at all times. Make sure the firearm is unloaded and safety is engaged before starting installation. Installation should be performed by a professional gunsmith.



1. Remove screw from clamp and slide sight onto rail to rest in foremost rail cross-slot on handguard.

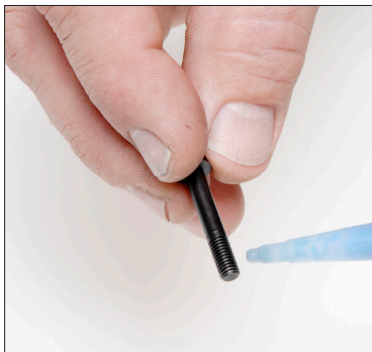

1. Remove screw from clamp and slide sight onto rail to rest in foremost rail cross-slot on handguard.



3. Insert screw and tighten while pushing sight forward against



Adjustments: Can be made with a 5.56mm bullet or a coin using the coin slot. To move bullet impact up, turn adjustment wheel to the right/clockwise. To move bullet impact down, turn adjustment wheel to the left/counter clockwise.

Zeroing Procedures

1. Fire a group of four (4) shots. Measure average distance from point of aim to point of impact.
2. Adjust rear sight for windage only.
3. Elevation adjustments are made with front sight post.
4. Confirm zero with a group of four aimed shots and adjust if necessary.
5. Sight apertures are on the same plane and either can be used without a change of impact.

TMIM_RearFixedSight_4-23-12

WWW.TROYIND.COM • West Springfield, Massachusetts 01089 U.S.A. • Tel: (866) 788-6412 • Fax: (413) 383-0339 • email: sales@troyind.com