



WARNING! Observe safe firearm handling practices at all times. Make sure the firearm is unloaded and safety is engaged before starting installation.




1. Unscrew clamp assembly and place sights at desired locations.

2. Apply one drop of thread locking compound to exposed threads



3. Replace clamp and tighten screw while pushing sight forwards against cross-slot.

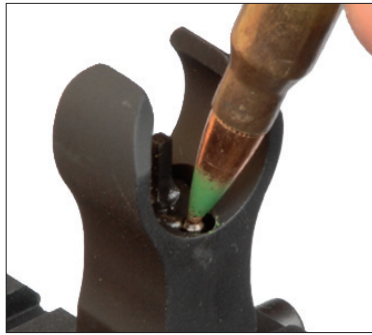

Front Sight Adjustments: To move impact bullet up, turn adjustment wheel to the right/clockwise. To move bullet impact down, turn adjustment wheel to the left/counter clockwise.



Rear Sight Adjustments: Can be made with a 5.56mm bullet tip or a coin using the coin slot. To move impact bullet up, turn adjustment wheel to the right/clockwise. To move bullet impact down, turn adjustment wheel to the left/counter clockwise.

*HK Sight shown above. Instructions same for M4

Operation: To raise sight, grasp and pull up until sight locks in the upright position. To fold sight, depress button on the left side of the base and fold down.

Zeroing Procedures

1. Fire a group of four (4) shots and measure average distance from point of aim to point of impact.
2. Adjust front sight for elevation only.
3. Windage adjustments are made with rear sight.
4. Confirm zero with a group of four aimed shots and adjust if necessary

<i>Value for one click of adjustment</i>		100M	200M	300M
M4	.50 MOA	5/8"	1 1/8"	1 5/8"
M16A4	.36 MOA	3/8"	7/8"	1 1/4"